

SHURE®

LEGENDARY
PERFORMANCE™

USB MICROPHONE

MV5 USER GUIDE

Le Guide de l'Utilisateur

Bedienungsanleitung

Guia del Usuario

Guida dell'Utente

Manual do Usuário

Руководство пользователя

日本語

사용자 가이드

繁體中文

Panduan Pengguna



© 2015 Shure Incorporated
27A24499 (Rev. 2)

Printed in U.S.A.



USB Microphone

Quick Setup

1. **Connect the microphone to a computer or mobile device. Use the appropriate cable (USB or Lightning).**

The Green status LED indicates a successful connection.

Note: When using apps like Voice Memo, the LED will not light until Record is engaged.

2. **Confirm that the MV5 is the selected audio device.**

Most computers and mobile devices automatically detect the MV5 and assign it as the primary audio device. If your computer settings default to another device, open the sound control panel and select the MV5. To quickly verify that the device is recognized, plug headphones into the MV5 audio output and play an audio track. If you can hear sound, the microphone is functioning properly.

Note: When the MV5 is assigned as the audio device, all monitoring and playback from the recording software goes to the headphone output of the MV5.

3. **Use the MODE button to select the preset mode that fits your application.**

If the audio is too quiet or causes distortion, gain can be manually configured. However, the modes typically do not require additional gain adjustments. Refer to the "Adjusting Microphone Level" topic in this guide for details.

4. **In your recording application, select the MV5 as the input source.**

See your software user guide for information on assigning input sources.

5. **Record.**

The microphone is ready to use!

Connections and Controls



- ① **Mode Selection Button**
Press to switch between preset modes
- ② **Mute Button**
Press to mute the microphone input
- ③ **Headphone Volume Control**
Adjusts the headphone volume
- ④ **Headphone Output**
Plug in any headphones with a 3.5 mm (1/8 inch) connector
- ⑤ **Micro USB Port**
Use the appropriate cable (USB or Lightning) to connect the MV5 to a computer or mobile device



- ⑥ **Voice Mode**
The LED indicator illuminates when this mode is selected
- ⑦ **Status Indicator**

| LED Behavior | Status |
|---------------------------|------------------------------------|
| Green | Active USB or Lightning connection |
| Flashing Red (all 3 LEDs) | Muted |

- ⑧ **Instrument Mode**
The LED indicator illuminates when this mode is selected

Note: Flat Mode is engaged when both mode LEDs are off.

Placement

This section suggests microphone placement for typical use cases. Keep in mind that there are many effective ways to record a given source. Experiment with microphone placement and settings to find what works best.

Podcast and Voice Recording

Set the microphone to the Voice mode. Speak directly into the front of the microphone, 2-12 inches (5-30 cm) away. Speaking closer to the microphone results in more bass response, similar to voices on a radio broadcast. Make additional gain adjustments if necessary.




Music, Singing, and Acoustic Instruments

To capture acoustic sources, such as singing, acoustic guitar, soft percussion, or other musical instruments, use a close microphone placement. Start with Instrument mode for best results.


Aim the microphone directly at the sound source. For a single source, such as a string instrument or a vocalist, place the microphone 6 to 12 inches (15 to 30 cm) away. For a small group or a performer who is singing and playing an instrument simultaneously, use a distance of 2 to 10 feet (0.6m to 3 m). Placing the microphone farther away results in more ambient room sound. Make additional gain adjustments if necessary.

Bands and Louder Sources

To record a band with drums, amplified instruments, or any other loud sources, start with Instrument mode for best results. Aim the microphone towards the group at a distance of 6 to 15 feet (1.83 to 4.6 m). Placement of the microphone depends on the size of the room, number of people, and instrument volume. If possible, walk around the room and listen to find where it sounds best. Make additional gain adjustments if necessary.

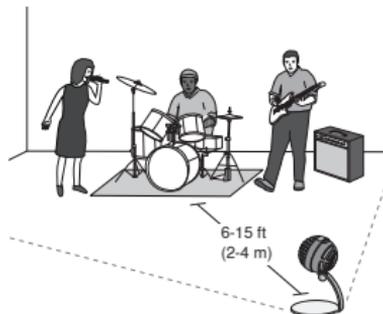

For a single electric guitar amplifier, aim the microphone towards the center of the speaker at a distance of 0 to 18 inches (0 to 45 cm).

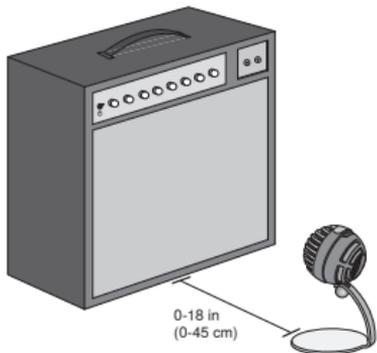

Additional Tips

Shure offers additional educational publications on recording techniques for specific instruments and applications. Visit www.shure.com for more information.

Adjusting Microphone Level

Microphone level (gain) typically does not need adjustment when using the appropriate preset mode. However, if you hear distortion or the audio is too low, adjust the microphone level in the Audio or Sound control panel of your computer or recording device.

Keep the following in mind:

- Set the microphone level before adjusting headphone volume.
- The headphone volume does not affect the signal level sent to the computer.
- Use the thumbwheel on the microphone to adjust headphone volume to a comfortable level. Do not change microphone gain to adjust the headphone volume.

Adjusting Headphone Level

The headphone monitoring level is affected by the device and the computer settings level. Raise your computer volume and easily adjust headphones through the MV5 thumbwheel.



Accessing the Control Panel

Windows

1. Open the sound control panel and select the **Recording** tab.
2. Open the **Shure MV5** device.
3. Under the **Levels** tab, adjust the gain level using the slider.

Mac®


1. Open the **Audio Midi Settings** panel.
2. Select the **Shure MV5** device.
3. Click on **Input** to adjust the gain using the slider.



Mac audio settings panel

Input Meter Level

If your digital audio workstation or recording software has input meters, adjust the microphone level so it peaks between -12 and -6 dB. Otherwise, simply listen to the audio to make sure it is loud enough and not distorting.



Peak Levels

The target range for peak levels on a typical meter is between -12 and -6 dB.

Listening Through Headphones

The headphone jack provides an equal blend of the direct microphone signal and audio playback from the computer. This allows you to conveniently adjust the headphone volume for both with one control, the thumbwheel on the MV5. To adjust the amount of playback audio relative to the direct microphone signal, use the computer or DAW mixer settings.

Tip: When first connecting the microphone to your computer, make sure to raise the volume level in the sound control panel of the computer for a strong audio signal. Then adjust headphone level for comfortable monitoring.

Preset Modes

Three selectable modes adjust settings for gain, equalization, and dynamics to bring out the best sound characteristics for your recording needs.

| Mode | Application | Characteristics |
|--|--|---|
|  Voice | Use for speech or vocals in podcasting or musical applications | Equalization to emphasize clarity and fullness, and gentle compression to keep levels consistent. A de-esser reduces sibilance (the harsh sound that occurs when words with an "S" are spoken). |
|  Instrument | Best for acoustic instruments and live music applications | Transparent compression to smooth out volume spikes and bring quiet passages forward. Equalization emphasizes detail and gives an overall natural sound. |
| Flat | Suited for any application | A completely unprocessed signal (no equalization or compression settings used). Adds flexibility when processing the audio after recording. |

Sampling Rate and Bit Depth

Sample Rate and Bit Depth settings are found in a drop down menu in the audio or sound control panel of your computer. You can adjust these variables to fit your needs. Select a lower sample rate for podcast recording, when it is important to have a smaller file for easy download. Select a higher sample rate for music and more dynamic recordings.

Tip: Record at a higher sample rate and bounce down to an M4A for a file with the highest sound quality at a manageable size.

Tip for PC users: Make sure that the sample rate and bit depth microphone settings, found in the sound control panel of the computer, match with the sample rate and bit depth selected in your software.

Troubleshooting

| Issue | Solution |
|---|--|
| The display does not illuminate | Make sure that the MV5 is fully plugged in. |
| Audio is too low | Check the computer sound control panel settings. When first connecting the MV5 to your computer, make sure to raise the computer volume level. |
| Audio sounds bad | Check the sound control panel of the computer to ensure that the MV5 is fully plugged in and recognized. |
| Audio is distorted | Use the audio meter to ensure that volume peaks are within the target range. If level is reaching the red peak indicator of the input meter, turn the gain down. |
| Audio sounds unnatural or jittery | Make sure that the sample rate and bit depth microphone settings, found in the sound control panel of the computer, are consistent with the sample rate and bit depth selected in your software. |
| MV5 is plugged in, but the volume meter does not register a signal. | Edit the privacy setting for the iOS device under SETTINGS > PRIVACY > MICROPHONE to give the recording application permission to use the microphone. |
| Device not working with USB hub. | The MV5 requires 250 mA per port. Check USB hub documentation for current/port specification. |

System Requirements and Compatibility

| | |
|------------|---|
| Windows | <ul style="list-style-type: none">• Windows 7 and Windows 8• Minimum RAM = 64 MB• USB 2.0 |
| Macintosh | <ul style="list-style-type: none">• OS X Lion 10.7, OS X Mountain Lion 10.8, OS X Mavericks 10.9, OS X Yosemite 10.10• Minimum RAM = 64 MB• USB 2.0 |
| iOS | <ul style="list-style-type: none">• iOS 8.0• iOS 7.0 |
| iPhone | <ul style="list-style-type: none">• iPhone 5• iPhone 5c• iPhone 5s• iPhone 6• iPhone 6 Plus |
| iPod Touch | <ul style="list-style-type: none">• 5th gen |
| iPad | <ul style="list-style-type: none">• iPad 4th gen• iPad Air• iPad Air 2 |
| iPad Mini | <ul style="list-style-type: none">• iPad Mini 1st gen• iPad Mini 2nd gen• iPad Mini 3rd gen |

Furnished Accessories

| | |
|---------------------|----------------|
| MV5 Desktop Stand | AMV-DS |
| 1 m USB cable | AMV-USB |
| 1 m Lightning cable | AMV-LTG |

Specifications

MFi Certified

Yes

DSP Modes (Presets)

Voice/Instrument/Flat

Cartridge Type

Electret Condenser (16 mm)

Polar Pattern

Unidirectional (Cardioid)

Bit Depth

16-bit/24-bit

Sampling Rate

44.1/48 kHz

Frequency Response

20 Hz to 20,000 Hz

Adjustable Gain Range

0 to +36 dB

Sensitivity

-40 dBFS/Pa at 1 kHz[1][2]

Maximum SPL

130 dB SPL [2]

Headphone Output

3.5 mm (1/8")

Power Requirements

Powered through USB or Lightning connector

Mute Switch Attenuation

Yes

Mounting Stand

Included

Stand Adapter

1/4 inch 20 thread (standard tri-pod mount)

Housing

PC/ABS

Net Weight

| | |
|------------------------|-------------------|
| Without Mounting Stand | 0.09 kg (3.17oz.) |
| With Mounting Stand | 0.16 kg (5.64oz.) |

Dimensions

66 x 67 x 65 mm H x W x D

Dimensions with Stand

89 x 142 x 97 mm H x W x D

Cable

1 m USB cable/1 m Lightning cable (LTG models only)

[1] 1 Pa=94 dB SPL

[2]At Minimum Gain, Flat Mode

Certifications

Information to the user

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada ICES-003 Compliance Label: CAN ICES-3 (B)/NMB-3(B)

Note: Testing is based on the use of supplied and recommended cable types. The use of other than shielded (screened) cable types may degrade EMC performance.

This product meets the Essential Requirements of all relevant European directives and is eligible for CE marking.

The CE Declaration of Conformity can be obtained from: www.shure.com/europe/compliance


Authorized European representative:
Shure Europe GmbH
Headquarters Europe, Middle East & Africa
Department: EMEA Approval
Jakob-Dieffenbacher-Str. 12
75031 Eppingen, Germany
Phone: 49-7262-92 49 0
Fax: 49-7262-92 49 11 4
Email: info@shure.de

| | |
|---|---|
|  | 적합등록번호 (MSIP Certification no.) : MSIP.REM.SHU.MV5 |
| | 기기 명칭 (Product Type) : 디지털 마이크 (Digital microphone) |
| | 모델명 (Model Name) : MV5 |
| | 신청인/제조업체/원산지 (Manufacturer/COO) : Shure Electronics Co., Ltd. / China |
| | 수입업체 (Importer) : 삼아프로사운드㈜ (Sama ProSound Co., Ltd.) |


"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPad, iPhone, iPod, iPod classic, iPod nano, iPod touch, and Retina are trademarks of Apple Inc., registered in the U.S. and other countries. iPad Air and iPad mini are trademarks of Apple Inc. The trademark "iPhone" is used with a license from iPhone K.K.

Mac® and Lightning® are registered trademarks of Apple Inc.

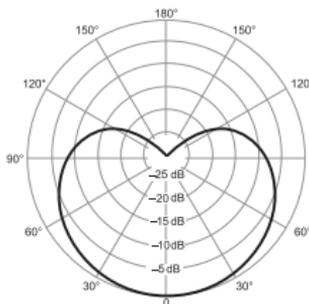

Polar Pattern

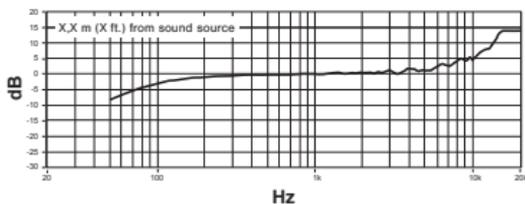

Frequency Response

SHURE
LEGENDARY
PERFORMANCE

©2014 Shure Incorporated

United States, Canada, Latin
 America, Caribbean
 Shure Incorporated
 3940 West Windsor Avenue
 Niles, IL 60714-6098 USA

Phone: 847-680-2800
 Fax: 847-680-1212 (US/CA)
 Fax: 847-680-6446
 Email: info@shure.com

Europe, Middle East, Africa
 Shure Europe GmbH
 Jahn-Dischingerstrasse 12, 12
 78091 Rapperswil, Germany

Phone: 49-7893-88100
 Fax: 49-7893-888114
 Email: info@shure.de

Asia, Pacific
 Shure Asia Limited
 2207, 505 King's Road
 North Point, Island East
 Hong Kong

Phone: 852-2993-4290
 Fax: 852-2958-4098
 Email: info@shure.com.hk
 PT: info@shure.asiacorp.com
 Komplek Heras Mangga Dua Blok L No. 5C Jakarta Pusat

info@shure.com